


HARMAN / KARDON®
SUBWOOFER MOUNTING ASSEMBLY
AND INSTALLATION



CAUTION: Do not use any screw over 3/4" long or damage to the desktop may occur.

Mounting Plate

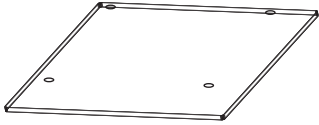

x1

Mounting Plate
Spacers



x4

Countersunk
Screws #6-1 3/4"



x4


Button Head
Flange Screws
#8-3/4"



x4


Step 1.

Remove the four existing screws mounting speaker grill at the bottom of the subwoofer. Do not remove the speaker grill.

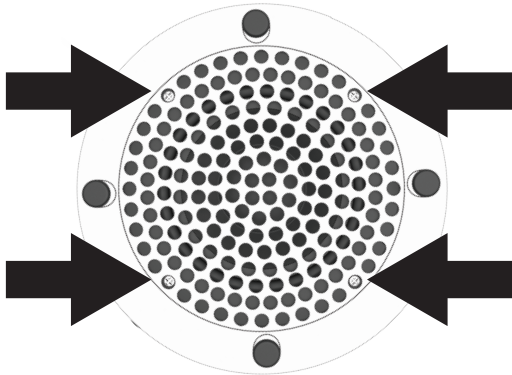


Step 2.

Place included spacers over each screw hole.

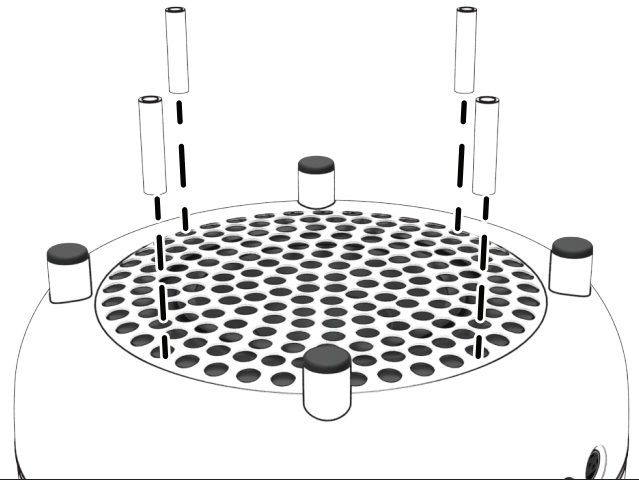

Step 3.

Align the mounting plate over the spacers. Secure the plate using the included Countersunk Screws #6-1 3/4"

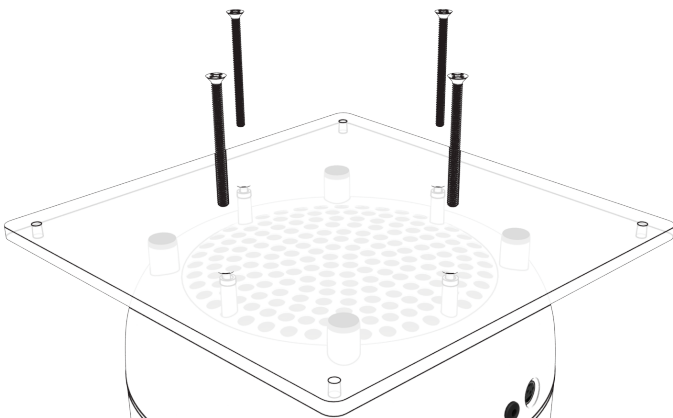

Step 4.

Mount the subwoofer underneath the desktop using the included Button Head Flange Screws #8-3/4"

